

Lifetime Guarantee

The PL-5085 is guaranteed against any mechanical defects. If it malfunctions, return it for repair or replacement free of charge.


Please include a \$2.50 shipping and handling fee and send to:

Prime Service Center
P.O. Box 9715
Stratford, CT 06497



PL-5085

Poser Pal Alarm Clock and Memo Holder

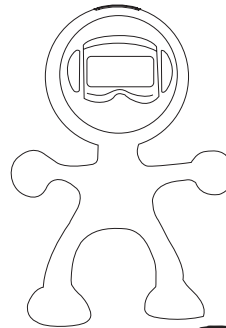

Operating Instructions

Pull out plastic battery protector (A) before use.

Set Time/Alarm/Date

Press set button (B) once to set alarm and hourly chime, then press advance button (C) to turn on alarm. (≡)
Press advance again to turn on chime. (⚡)
Press advance again to turn off alarm.
Press advance again to turn off chime.
Press set button again to set alarm hour, then press advance to adjust. (continue pressing advance to adjust AM "A" or PM "P").
Press set button again to set alarm minutes, then press advance to adjust.
Press set button again to set month, then press advance to adjust.
Press set button again to set date, then press advance to adjust.
Press set button again to set time hour, then press advance to adjust. (continue pressing advance to adjust AM "A" or PM "P").
Press set button again to set time minutes, then press advance to adjust.
Press set button again to exit set mode.

Viewing current Time/Alarm time/Date

Press advance button (C) to toggle between time, alarm time, date, and time in seconds.

If the clock display becomes dim or erratic, you'll need to replace the battery. Carefully pull up the battery holder (D). Replace with equivalent button cell. Dispose of battery properly.

Poser Pal

You can position the Poser Pal by gently bending its arms and legs into any pose.

The clip on the back of the head can be used as a holder for a memo, photo or even a small document. Press the lower part of the clip to open, insert your document, and release.

